



Ultraclad® UA 4533 Head Starter 5 mm diameter drainage holes drilled through base of Head Starter at 300 mm centres

IMPORTANT:
 Sizes shown are indicative only!
 Contractor to confirm onsite as joinery suites may vary

Applying sealant before fitting UA 4533 sealant at facade

Note: Ultraclad®UA 4533 Head Starter to extend 40 mm past edge of window or door joinery.

Building underlay, flashing tape and UA 5833 omitted for clarity

Ultraclad® UA 7584 Jamb Flashing

REVISION:	11
SCALE:	1 : 2 (@A4)
DATE:	2024
BRANZ APPRAISAL #487	