



IMPORTANT:
 Sizes shown are indicative only!
 Contractor to confirm onsite as
 joinery suites may vary.

Applying sealant before fitting UA 4533
 sealant at facade

Note: Ultraclad® UA 4533 Head Starter to extend
 40 mm past edge of window or door joinery.
 Building underlay, flashing tape and UA 5833
 omitted for clarity

Ultraclad® UA 4533 Head Starter 5 mm diameter
 drainage holes drilled through base of Head Starter
 at 300 mm centres

Ultraclad® UA 7584 Jamb Flashing

REVISION:	11
SCALE:	1 : 2 (@A4)
DATE:	2024
BRANZ APPRAISAL #796	